



Bayonet
8 pin



I_{max}=16A

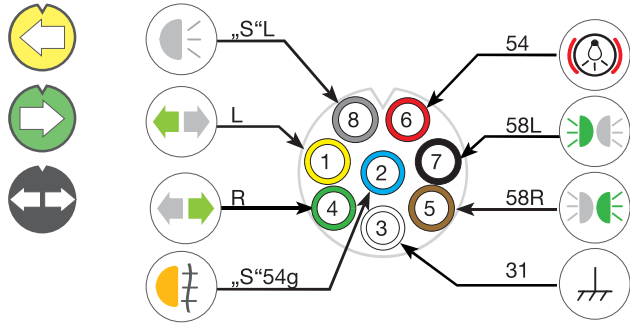


Bayonet 8 pin female

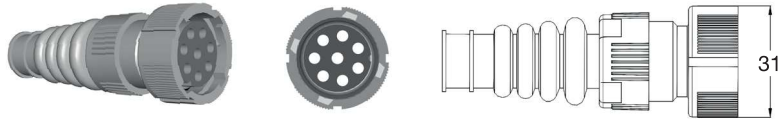


Mounting instruction Bayonet 8 pin female


SPARE PART NO.: 13-0828-034

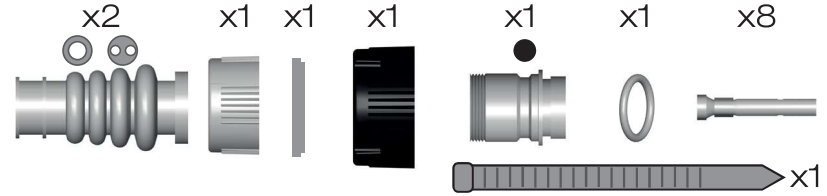


1.

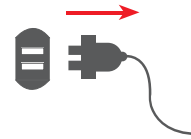


2.

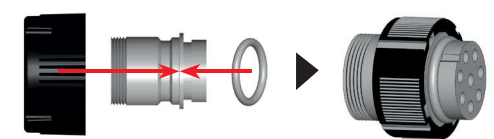

 
3.



 
4.



 5.



6.

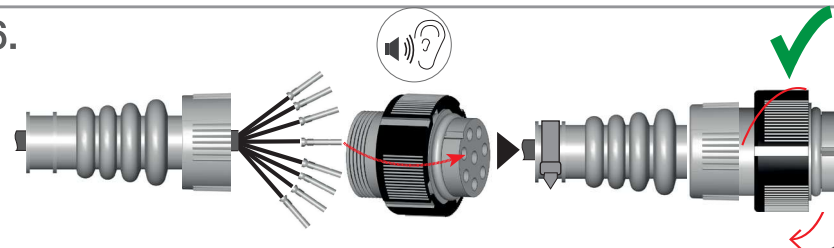

Bayonet
8 pin



I_{max}=16A





Bayonet
8 pin



I_{max}=16A




Bayonet 8 pin female

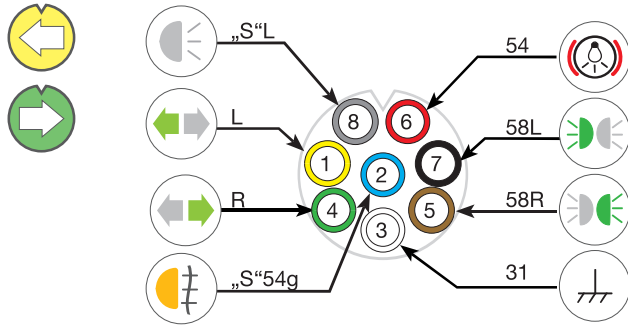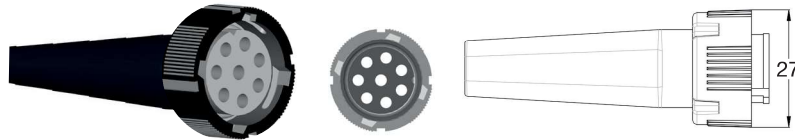

Mounting instruction Bayonet 8 pin female

SPARE PART NO.: 15-0821-524

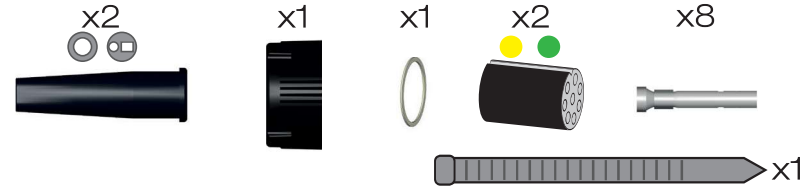

1. Connect the power cable to the connector.
2. Insert the washer into the connector housing.
3. Insert the nut into the connector housing.
4. Tighten the nut. A close-up shows the nut being tightened to a depth of 35mm, with a 5mm gap remaining.
5. Insert the pins into the connector housing. A warning icon indicates that this step may be noisy. A green checkmark indicates the final assembly is complete.


Bayonet
8 pin



I_{max}=16A




Bayonet
8 pin

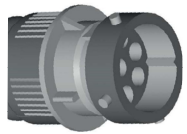

$I_{max}=16A$




Bayonet 8 pin male

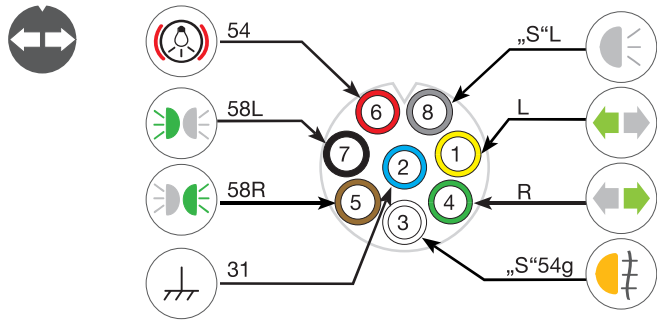


Mounting instruction Bayonet 8 pin male

SPARE PART NO.: 13-0838-054

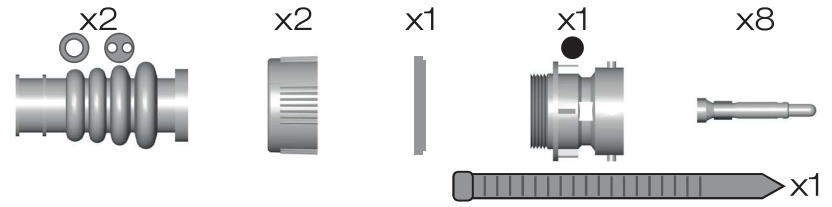

1. Insert the cable into the connector.
2. Push the connector onto the cable until the locking mechanism engages.
3. Tighten the connector by turning it clockwise. A callout shows a 35mm length and a 5mm gap.
4. Tighten the connector further until a clicking sound is heard, indicated by a speaker icon.
5. The connector is fully secured, as shown by the green checkmark.

Bayonet
8 pin

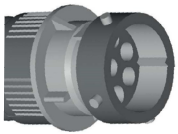

$I_{max}=16A$

